


BALL VALVE TYPE21 • 21ALPHA


BS-001E-6

15-50mm (1/2"-2")

Exterior Identification

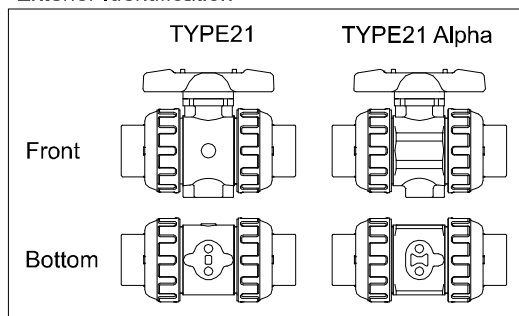

Type21 & Type21 Alpha have not all same parts to make one complete, Please check and Specify the model from the valve overview.

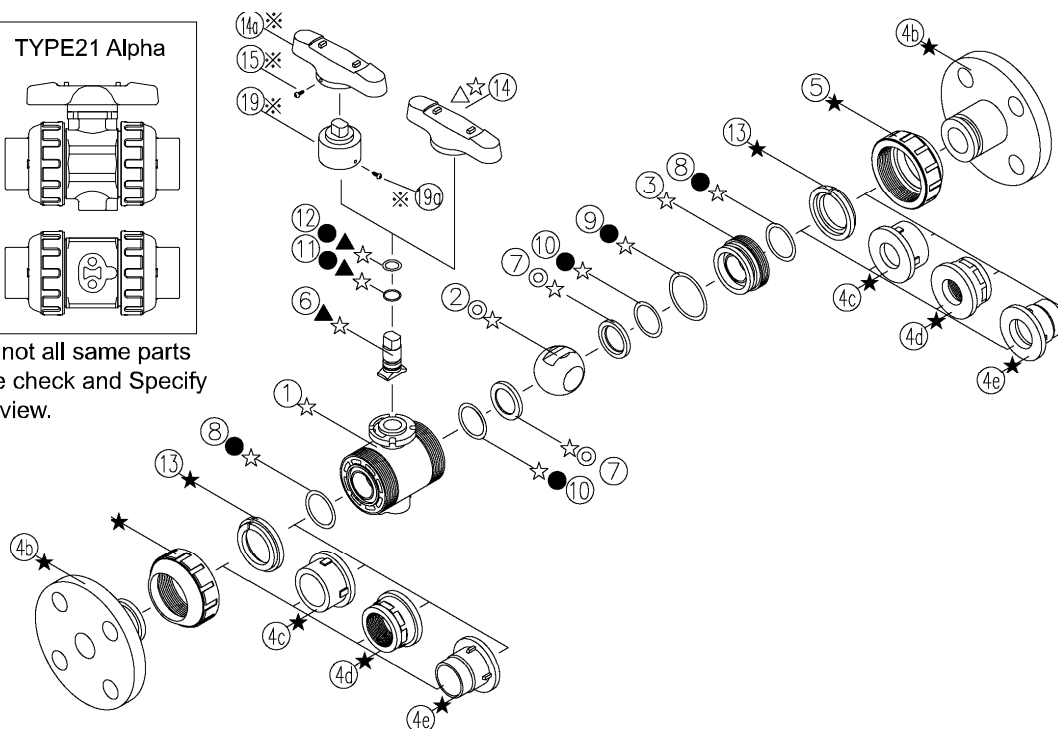

CHECK	PARTS NAME	DESCRIPTION	PCS	REMARK
☐ TYPE 21 ☐ TYPE 21ALPHA	● O-RING SET	⑧ O-RING (A)	2	
		⑨ O-RING (B)	1	
		⑩ O-RING (C)	2	
		⑪ O-RING (D)	1	
		⑫ O-RING (E)	1	
☐ TYPE 21 ☐ TYPE 21ALPHA	◎ BALL/SEAT SET	② BALL	1	
		⑦ SEAT	2	
☐ TYPE 21 ☐ TYPE 21ALPHA	▲ STEM ASSEMBLY	⑥ STEM	1	
		⑪ O-RING (D)	1	
		⑫ O-RING (E)	1	
☐ TYPE 21 ☐ TYPE 21ALPHA	☆ BODY ASSEMBLY	—	—	ALL PARTS EXCEPT ★END CONNECTOR/UNION NUT SET & ※STEM EXTENTION SET
☐	△ HANDLE	⑭ HANDLE	1	
☐	▲ LOCKING DEVICE SET	⑭ HANDLE	1	
		⑭a TRIGGER	1	
		⑭b TAPPING SCREW (C)	1	
☐	★ END CONNECTOR/ UNION NUT SET	④ END CONNECTOR	2	④b: FLANGE, ④c: SOCKET, ④d: THREADED, ④e: BUTT
		⑤ UNION NUT	2	
		⑬ STOP RING	2	④b USES FOR ONLY FLANGED END
☐	※ STEM EXTENTION SET	⑭ HANDLE	1	
		⑮ TAPPING SCREW (A)	1	
		⑲ STEM EXTENTION	1	
		⑲a TAPPING SCREW (B)	1	

Note 1. Asahi AV spare parts designed specifically for Asahi AV valves may be used for replacement purpose only.
 2. All the seals must be kept in their original packaging, and stored cool, dry and dark.

ASAHI YUKIZAI CORPORATION